



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

<p>Item Descriptions</p> <p>Bobrick (USA) Stainless steel automatic wall mounted foam soap dispenser</p> <p>Model</p> <p>B-2013.MBLK</p> <p>Dimensions</p> <p>W108 x L107 x H268 mm</p> <p>Material/ Finish</p> <p>Stainless Steel/ Matte black</p> <p>Manufacturer</p> <p>Bobrick Washroom Equipment Inc. (USA)</p> <p>Source</p> <p>Ka Shing Enterprises (H.K) Limited Mr. Ivan Lau / Mr. GilmanYuen (852) 2628-0661 / (852) 2490-2700</p> <p>Contact Tel/Fax</p> <p>(852) 2628-0661 / (852) 2490-2700</p> <p>E-mail</p> <p>project@kashingehk.com</p> <p>Website</p> <p>www.kashingehk.com</p>	<p>Bobrick (USA) Stainless steel automatic wall mounted foam soap dispenser</p>	<p>Illustration/ Drawing</p>
<p>Housing</p> <p>— Welded 18-8, Type-304, 18-gauge (1.0 mm) stainless steel with satin-finish. Plastic back plate incorporates mounting screw holes and mounting tape. Equipped with concealed mounting, clear acrylic refill-indicator window and key lock. Refillable, plastic container. Capacity: 800 ml (27-fl oz).</p> <p>Valve</p> <p>— No-touch, sensor-activated valve suitable for foam soap, concentrated foam soap or cartridge type of foam soap</p> <p>OPERATION:</p> <p>To fill the dispenser, remove the lid and fill with foaming hand soap solution. Dispenses foaming hand soap solution of viscosities ranging from 0-150 cps. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing. To activate the dispenser, place hand under spout for approximately one second. Sensing range comes at factory setting of 60mm (2-1/2"). The sensing range set by the factory is recommended for optimal performance. Window indicates when refill is required. The locked, hinged housing opens for re-filling only with special key provided. Requires four (4) Alkaline "AA" Cell Batteries, 1.5V (not included). Blue indicator light signals "IN USE". Flashing blue light signals "LOW BATTERY." CE Certified.</p> <p>INSTALLATION:</p> <p>Install dispenser at least 200 mm (8") from any projection or horizontal surface which may interfere with the operation of the automatic sensor. Mount the dispenser to the wall by using the enclosed screws and wall plugs. The prepared mounting tape may also be used. Make sure the wall surface is cleaned and in good condition to ensure proper mating of the dispenser to the wall. Install four (4) Alkaline "AA" Cell Batteries, 1.5V and replace battery cover. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing. Housing must be closed for dispenser to function</p>		

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.