

Ka Shing Enterprise (H.K.) Ltd. ROOM 1706 NEW TERRITORIES TSUEN WAN HO LIK CENTRE, 66A SHA TSUI ROAD Tel:26280661 Fax: 24902700 Email: project@kashingehk.com Website: www.kashingehk.com



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Koala Kare (USA) Recessed countertop mounted polyethylene baby changing station	Illustration/ Drawing		
	;European Standards: EN 12221 Changing units for domestic use.			
Dimensions	L812 x W497 x H76 mm			
Model	KB112-01RE	Baby Changing Station		
Material/ Color	Polyethylene/ Grey			
Manufacturer	Koala Kare (USA)			
Source	Ka Shing Enterprises (H.K) Limted			
	Mr. Ivan Lau / Mr. GilmanYuen			
Contact Tel/Fax	(852) 2628-0661 / (852) 2490-2700	∢ 812mm→		
E-mail	project@kashingehk.com			
Website	www.kashingehk.com			
KB112-01RE Co	ountertop Recess	497mm		
Mounted	-			
Koala recess countertop	mounted polyethylene laybed baby changing station.			
	safe and durable changing surface. Offers a perfect ce is unavailable. Includes child protection straps.	1/4 in Mounting Holes x 8		
Unit Dimensions: 32" V	V x 195/8" L (812 x 497 mm)			
Depth (closed): 3" (76 1				
Shipping Weight: 6 lbs		76mm		
MATERIALS:		Unit depth from countertop surface		
-	ensity polyethylene. Mounting instructions and			
	ntoured changing surface is 379 sq. in (2445 sq. cm)			
and comes complete w	in nyion safety straps.			

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.



Ka Shing Enterprise (H.K.) Ltd.

ROOM 1706 NEW TERRITORIES TSUEN WAN HO LIK CENTRE, 66A SHA TSUI ROAD Tel:26280661 Fax: 24902700 Email: project@kashingehk.com Website: www.kashingehk.com

PROJECT	REF	REV	ITEM CODE	\bigcirc
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET



KB112-01RE Installation Instructions

Step 1.


Remove changing station from the shipping container and check for any freight damage. Identify the best location for installing the unit.

Step 2.

Remove the rough opening template from the shipping carton. Remove paper template and lay it on the surface where the unit will be mounted. Drill hole in interior of rough opening to allow saw access. Cut out rough opening.

Step 3.

Construct under counter support as shown in the illustration. Support should be 3" below bottom of mounting surface.

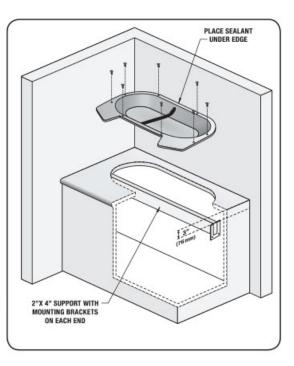

Step 4.

Place the Countertop Baby Changing Station (BCS) onto counter surface and place in desired position. Using the mounting holes as a guide, mark the screw hole locations with a pencil. Remove BCS and drill holes with a 1/8" diameter drill bit.

Step 5.

Place BCS onto counter surface using the drilled holes as a guide. Slide screw through the screw cover base. Screw fasteners through holes into countertop surface. Securely snap screw cover onto screw cover base. Apply a suitable water sealant (not provided) such as silicone around the base of the BCS.

*Note: If drilling into marble or granite, take care to not crack or chip the surface area while drilling. Larger drill bit may be necessary.

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.